

GUN LOCK W/DIGITS



Material:

Zamak

Function:

To open the lock turn the digits to the correct code. Then push down the red button and pull apart.

To lock the lock simply press the 2 parts together and turn the digits

Specifications:

All locks are pre-coded to 0-0-0


Re-coding by pushing the reset button

in with a pen while digits are in the

pre-set code. While reset button is in

turn the dials to the desired combination

and release the reset button

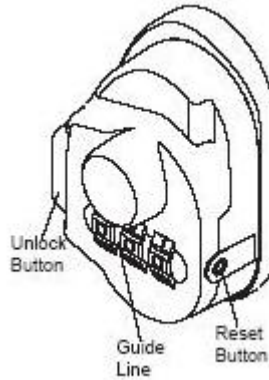

Item No:

Black colour # 14.60.400

Yellow colour # 14.60.401



ONLY FOR EXTRA SECURITY. ALWAYS FOLLOW YOUR COUNTRY'S LOCAL LAWS !!